



BlackBerry 8820 trackball replacement

Step by step guide to clean, remove, or replace the track ball.

Written By: ryan





TOOLS:

- [64 Bit Driver Kit](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembling BlackBerry 8820 Outer Casing



- Remove the battery cover, by applying pressure and sliding down to the silver square on the back of the phone.

Step 2



- Remove the battery by prying under it with your finger or the plastic opening tool.
- Remove the four small 3/8" long screws using a 1/16" diameter torx screwdriver.

Step 3



- Use a plastic opening tool (similar to the one shown) to carefully remove the two side bars of plastic.

Step 4




- Use the plastic opening tool to carefully pry the back casing off.
- ⓘ There are two small clamps on each edge that need to be unhooked before the casing will come off.

Step 5



- Pry off the front casing
 - ⚠ ***Be aware of sensors and other sensitive areas of the newly exposed electronics***

Step 6 — Track Ball

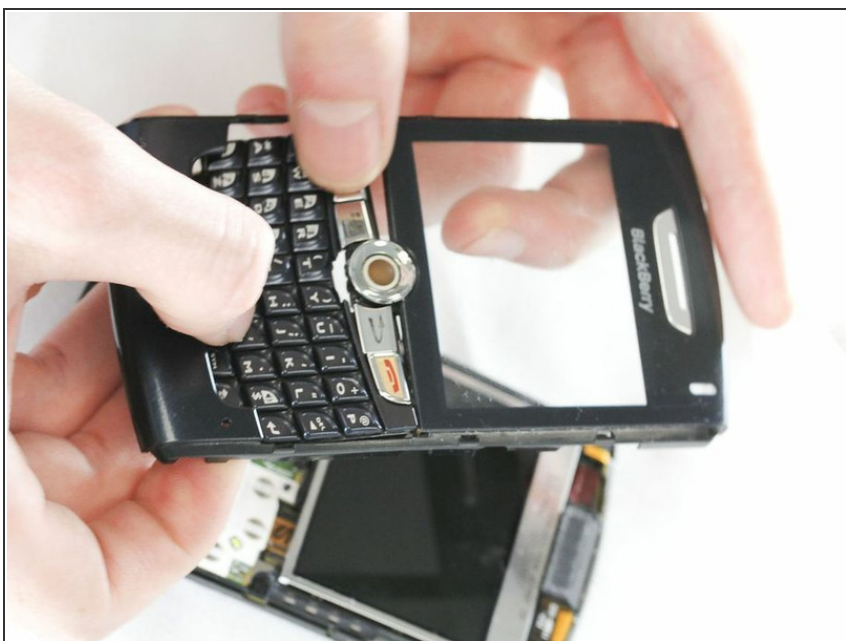

- After removing the front from the outer casing, the track ball will come off attached to the casing.

Step 7



- Remove the track ball from the front case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-20 04:42:55 AM.